



# Model 4

## Compound Leverage Arbor Press

### Instruction and Parts list

#### MODEL 4

<u>Item</u>	<u>Part Name</u>	<u>Part No.</u>
1	Frame	260
2	Ram Cap	261
3	Table	262
4	Table Plate	701227
5	Table Pawl	265
6	Table Pawl Handle	266
7	Table Clamp	267
8	Table Clamp Nut	268
9	Table Wrench	269
10	Table Crank	270
11	Table Pinion	271
12	Compound	272
13	Leverweight	273
14	Pawl	274
15	Ram (2" x 2" x 24")	275
16	Collar	276
17	Handbrake	277
18	Handbrake Clamp	278
19	Table Washer (2 required)	279
20	Compound Rest Pin	280
21	Table Spring (2 required)	281

<u>Item</u>	<u>Part Name</u>	<u>Part No.</u>
22	Table Stud (2 required)	282
23	Handle	283
24	Ratchet Pawl Pin	284
25	Lever Pin	285
26	Long Sliding Pin (1" x 10 1/2")	286
27	Table Pawl Shaft	287
28	Short Sliding Pin (1" x 6 1/4")	288
29	Handbrake Stud	289
30	Spindle	290
31	Table Pinion Shaft	291
32	Handwheel	294
33	Mandrel Catcher	243
34	Spring	579

***Please contact factory for current prices.***


**Ordering information:** Please order all repair parts by part number and name, also mention model number of press. All parts are shipped F.O.B. Factory in Grand Haven, MI.

**Lubrication:** Keep all working parts of the press well oiled for easier operation. Also keep a light film of oil over the entire surface of the ram to prevent rust.

## DAKE

Division of JSJ Corp.  
724 Robbins Road  
Grand Haven, MI 49417

Phone: 616-842-7110 800-937-3253  
Fax: 616-842-0859 800-846-3253  
E-Mail: customerservice@dakecorp.com  
technicalservice@dakecorp.com  
Website: www.dakecorp.com

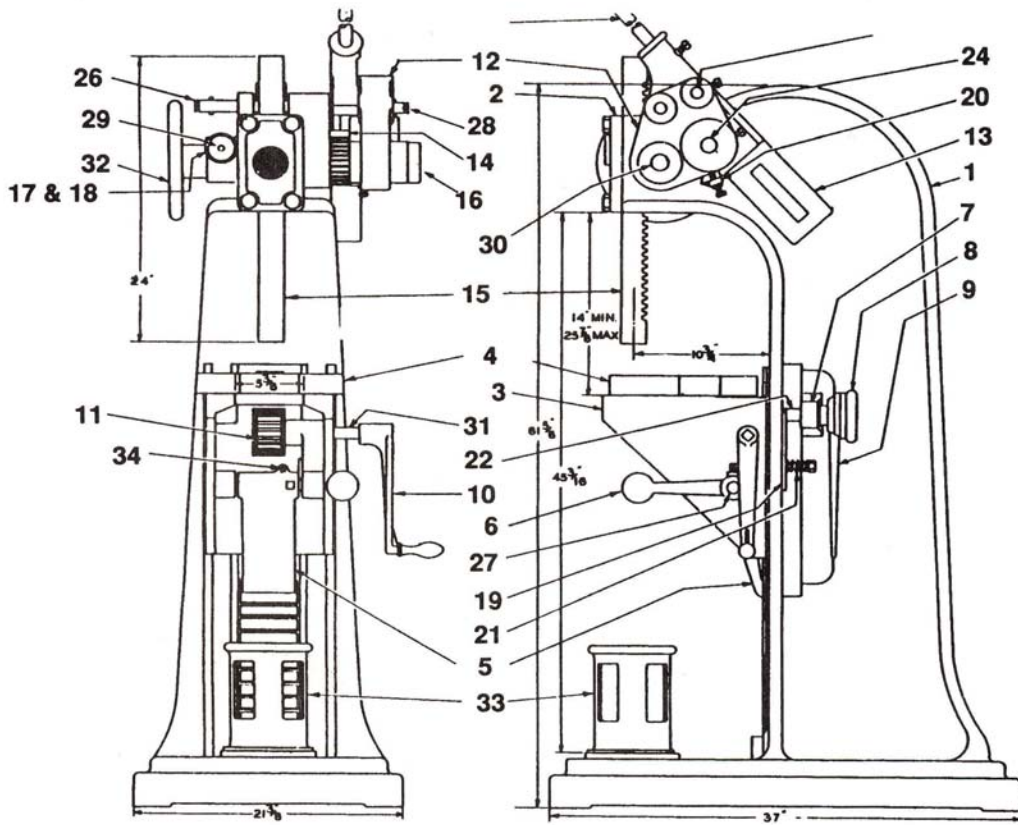

## SAFETY

**This is the safety alert symbol.** When you see this symbol on your press, be alert to the potential for personal injury.

### Follow recommended precautions and safe operating practices.

**Carefully read all safety messages in these instructions and on your press safety signs.** Keep safety labels in good condition. Replace missing or damaged safety labels.

**This machine is intended to be operated by one person.** This person should be conscious of the press ram movement not only for themselves but also for persons in the immediate area of the machine.

**Under no circumstances increase the leverage ratio of the press by using a longer handle or by placing a pipe over the handle.** Never hammer on top of the ram.